

smith+nobel 

# 30L Convection/Grill Microwave With Air Frying



## Instruction Manual

Model: SNAMW30

# Important Safeguards

**To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:**

## For Your Safety

- Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children less than 8 years of age shall be kept away unless continuously supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment).
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Only use utensils that are suitable for use in microwave ovens.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
- The microwave oven shall not be placed in a cabinet.
- The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Farm houses;
  - Bed and breakfast type environments.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Metallic containers for food and beverages are not allowed during microwave cooking.
- The appliance shall not be cleaned with a steam cleaner.
- The appliance is intended to be used freestanding.

- The rear surface of appliances shall be placed against a wall.
- Steam cleaner is not to be used.
- Surface of a storage drawer can get hot.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

## To Reduce the Risk of Injury to Persons During Installation

### **ANGER**

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

### **ARNING**

The power supply cord of this appliance is fitted with an earthed plug. This appliance must only be connected to an earthed Domestic power outlet, do not use in conjunction with Powerboards, double adaptors, extension leads or similar connectors.

## Caution

### **Personal Injury Hazard**

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Only use this appliance with microwave safe containers or cooking utensils when using appliance in microwave mode, confirm that information on containers /utensils are safe for microwave use.



### **CAUTION: HOT SURFACES**

The surfaces are liable to get hot during use, do not touch.

### **IMPORTANT SAFETY INSTRUCTIONS**

**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

## Save These Instructions



# Features of Your 30L Convection/ Grill Microwave With Air Frying

## Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.


Your oven comes with the following accessories:

Glass turntable

Grill tray


Grill Rack

Instruction Manual

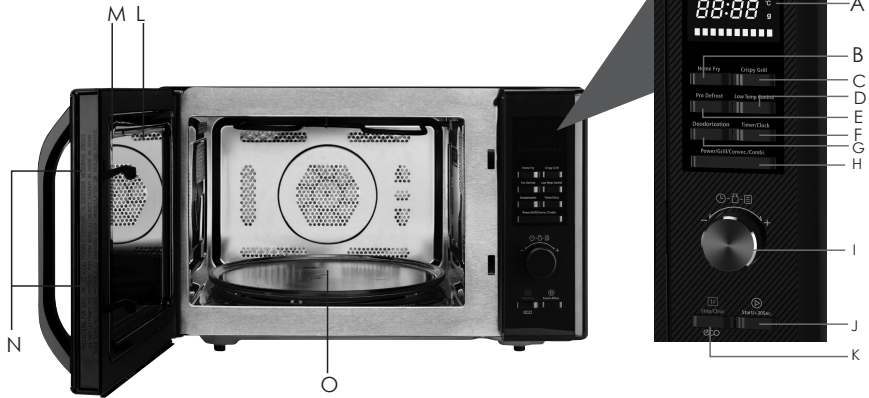


- A LED Display
- B Home Fry Button
- C Crispy Grill Button
- D Low Temp Control
- E Pro Defrost Button
- F Timer/Clock Button
- G Deodorization Button
- H Power/Grill/Convec./Combi. Button
- I Control Knob
- J Start/+30Sec. Button
- K Stop/Clear/ECO Button
- L Observation Window
- M Door Assembly
- N Safety Interlock System
- O Glass Turntable

## Turntable Installation

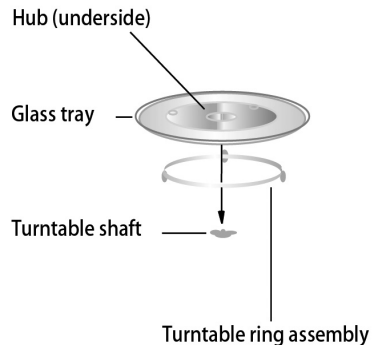

 Grill tray (Cannot be used in conjunction with microwave function and must be placed on the grill rack)



Grill Rack (Cannot be used in microwave function and must be placed on the glass turntable).

- a. Never place the glass turntable upside down. The glass turntable should never be restricted.
- b. Both glass turntable and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass turntable for cooking.
- d. If glass turntable or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

# Materials You Can Use In Your Microwave Oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

**Note: When using Convection /Grill mode only, containers /utensils must be heat resistant (Metal , Pirex or ceramic) , but cannot be plastic. When using Microwave /Convection/grill combo mode, container/utensil must be heat resistant , cannot be plastic, so can only be glass or ceramic.**

# Materials to Be Avoided In Microwave Oven Mode

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


# Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

## Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

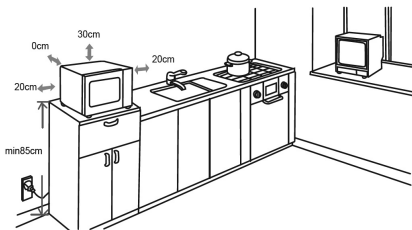

- The minimum installation height is 85cm.
  - The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
  - Do not remove the legs from the bottom of the oven.
  - Blocking the intake and/ or outlet openings can damage the oven.
  - Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a domestic power outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

# Operation Instruction

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

## 1.Clock Setting

When the microwave oven is energised, the oven will display "0:00", buzzer will ring once.

- Press "TIMER/CLOCK" twice, the hour figures will flash.
- Turn "🕒" Dial to adjust the hour figures, the input time ranges from 0-23(24-hour).
- Press "TIMER/CLOCK", the minute figures will flash.
- Turn "🕒" Dial to adjust the minute figures, the input time range from 0-59.
- Press "TIMER/CLOCK" to finish clock setting. ":" will flash.

### Note:



1. If the clock is not set, it would not function when powered.
2. During the process of clock setting, if you press " STOP/CLEAR ", the oven will go back to the previous status automatically.

## 2. Timer

- Press "TIMER/CLOCK" Button once, the screen will display 00:00.
- Turn "🕒" Dial to enter the desired time. (The maximum cooking time is 95 minutes.)
- Press " START/+30SEC " Button to confirm setting.
- When the time has lapsed ( Timed out), the buzzer will ring 5 times.When timer has lapsed the display will revert back to Clock time.

**Note: The timer display time only relates to the timer function and not the 24 Hour Clock Time.**

### 3. Microwave Cooking

- Press the "POWER/GRILL/CONVEC/COMBI." Button once and "P100" will flash.
- Press " START/+30SEC " to confirm. The "P100" will illuminate , this confirmation indicates to you are now in Microwave only cooking mode.
- Press "POWER/GRILL/CONVEC/COMBI." Button repeatedly or turn  " Dial to select the microwave power from 100% to 10%. "P100", "P 80", "P 50", "P 30", "P 10" will display in order to select the desired power setting.
- Press "START/+30SEC " Button to confirm.
- Turn  " Dial to adjust the cooking time. (The cooking time range can be set from minimum 5 Seconds to maximum 95 Minutes).
- Press " START/+30SEC " Button to start cooking.



NOTE: Tabled below are the respective default time intervals when selecting cooking time range:

0---1 min : 5 seconds  
 1---5 min : 10 seconds  
 5---10 min : 30 seconds  
 10---30 min : 1 minute  
 30---95 min : 5 minutes

#### Microwave Power Selection Chart

Press	Once	Twice	Thrice	4 times	5 times
Microwave Power	100%	80%	50%	30%	10%
Display	P100	P80	P50	P30	P10

### 4. Grill Cooking

- Press the "POWER/GRILL/CONVEC/COMBI." Button once and "P100" will flash.
- Press "POWER/GRILL/CONVEC/COMBI." Button repeatedly or turn  " Dial to select the grill function. Stop pressing/turning when "G-1" flashes.
- Press "START/+30SEC " Button to confirm. The "G-1" will illuminate , confirming that appliance is now in Grill Mode.
- Turn  " Dial to adjust the cooking time. (The cooking time range can be set from minimum 5 Seconds to maximum 95 Minutes).
- Press " START/+30SEC " to start grill cooking.

### 5. Combination Cooking



- Press the "POWER/GRILL/CONVEC/COMBI." Button once and "P100" will flash.
- Press " POWER/GRILL/CONVEC/COMBI." Button repeatedly or turn  " Dial to select combination mode. Stop pressing button or turning Dial when reaching the desired cooking combo (Refer to table below for corresponding control panel display code).
- Press " START/+30SEC " Button to confirm.
- Turn  " Dial to adjust the cooking time. (The cooking time range can be set from minimum 5 seconds to maximum 95 minutes).
- Press " START/+30SEC " Button to start cooking.

#### Note: Combination Cooking Display Code Chart

Instructions	Display	Microwave	Grill	Convection
1	C-1	●		●
2	C-2	●	●	
3	C-3		●	●
4	C-4	●	●	●


### 6. Convection Cooking (With preheating function)

The convection cooking mode allows you to cook food like is done in a traditional oven. Microwave is not used. It is recommended that you should preheat the oven to the appropriate temperature before placing the food in the oven.


- Press the "POWER/GRILL/CONVEC/COMBI." Button once and "P100" will flash.
- Press " POWER/GRILL/CONVEC/COMBI." Button or turn  " Dial to select convection only Mode.
- Press " START/+30SEC " Button to confirm convection mode.
- Turn  " Dial to select the convection temperature.  
 Note: The temperature range to select is from 140 degrees to 230 degrees.
- Press the "START/+30SEC" Button to confirm the selected temperature.
- Press the "START/+30SEC " Button to start preheating. When the preheating temperature is reached, the buzzer will sound




twice to remind you to put the food into the oven. And the preheated temperature is displayed and flashing.

- Put the food into the oven and close the door. Turn "  " Dial to adjust the cooking time. (The maximum setting time is 95 minutes.)
- Press the "START/+30SEC " Button to start cooking.


## 7. Convection Cooking (Without pre-heating function)

- Press the "POWER/GRILL/CONVEC/COMBI." Button once and "P100" will flash.
- Press " POWER/GRILL/CONVEC/COMBI. " Button or turn "  " Dial to select convection function. Stop pressing button/turning dial when "140" is flashing.

- Press " START/+30SEC " to confirm.

- Turn "  " Dial to select the convection temperature.



Note: The temperature range to select is from 140 degrees to 230 degrees.


- Press the "START/+30SEC" Button to confirm the temperature.
- Turn "  " Dial to adjust the cooking time. (The maximum setting time is 95 minutes.)
- Press the "START/+30SEC" key to start cooking.

## 8. Multi-Stage Cooking

A maximum of two stages can be set. If one stage is defrosting, it should be put in the first stage automatically. The buzzer will ring once after each stage and when next stage begins. Note: Auto menu and preheating cannot be set as one of the multi-stage.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

- Press "PRO DEFROST " Button twice, the screen will display "dEF2";
- Turn "  " Dial to adjust the defrost time of 5 minutes;
- Press "POWER/GRILL/CONVEC/COMBI." Button once;
- Press " START/+30SEC" Button to confirm;
- Turn "  " Dial to choose 80% microwave power till "P80" is displayed;



- Press "START/+30SEC" Button to confirm;
- Turn "  " Dial to adjust the cooking time of 7 minutes;
- Press "START/ +30SEC" to start cooking.

## 9. Speedy Cooking

- In Standby Mode, press " START/+30SEC" Button to cook with 100% power. Each press of the same button will increase cooking time by 30 seconds.
- In Microwave, Grill, Convection and Combination Modes, press "START/+30SEC" Button to cook with 100% power level for 30 seconds.

Note: Each press of the same button will increase cooking time by 30 seconds.

## 10. Auto Menu


- Turn "  " Dial clockwise to select a dedicated Auto Menu function A1 to A10 displayed on control panel( Refer to table below on page 10 for desired function selection).
- Press "START/ +30 SEC" Button to confirm the menu Button.
- Turn "  " Dial to select the weight of the produce to be cooked , "g" will illuminate on the display.
- Press "START/ +30 SEC" Button to start cooking.

### Note:

- Cake menu is under convection cooking mode with 160 °C -warm-up function, and you must preheat first following the auto menu operation, when the oven reaches the temperature, it will stop working and buzzer sound will remind user to open the door to put cake in, then press " START/ +30 SEC " Button to start cooking.
- When roast chicken is selected and 2/3 of the time has passed, it will ring twice to tell you to turn over the food. You can just leave it and continue, but for better result, turn the food over, close the door, and then press "START/ +30 SEC " to continue cooking.

Menu	Weight	Display	Power
A1 AUTO REHEAT	150g	150	100%
	250g	250	
	350g	350	
	450g	450	
	600g	600	
A2 POTATO	1 (about 230g)	1	100%
	2 (about 460g)	2	
	3 (about 690g)	3	
A3 MEAT	150g	150	100%
	300g	300	
	450g	450	
	600g	600	
A4 VEGETABLE	150g	150	100%
	350g	350	
	500g	500	
A5 FISH	150g	150	80%
	250g	250	
	350g	350	
	450g	450	
	650g	650	
A6 PASTA	50g(with 450g cold water)	50	80%
	100g(with 800g coldwater)	100	
	150g(with 1200g cold water)	150	
A7 SOUP	200ml	200	100%
	400ml	400	
	600ml	600	
A8 CAKE	475g	475	Preheat to 160 °C
A9 PIZZA	200g	200	C-4
	300g	300	
	400g	400	
A10 CHICKEN	500g	500	C-4
	750g	750	
	1000g	1000	
	1200g	1200	



## 11. Home Fry

- Press the "HOME FRY" Button.
- Turn  "Dial and when "H1", "H2", "H3", "H4", "H5", "H6", "H7", "H8" or "H9" is displayed , select the desired setting by referring to table below.
- Press " START/+30SEC" Button to start preheating.
- When the preheating to, the buzzer will sound to remind you to put the food into the oven. Place the food into the oven and close the door.
- Press " START/+30SEC" Button to start cooking.

Note: When you choose Home Fry function, please do not put the food into the oven when oven is cold. The oven needs to be preheated first. After several minutes, the buzzer sounds twice to remind you to put the food into the oven. After placement of the food in the oven, please press " START/+30SEC" Button again. The timer will count down, and the food will be cooked perfectly on completion.

No.	Menu	Weight(g)
H1	Frozen French fries	300
H2	Frozen Potato croquettes	310
H3	Frozen Squid	250
H4	Frozen Onion rings	225
H5	Frozen Chicken nuggets	400
H6	Escalope	350
H7	Shrimps	165
H8	Vegetable	200
H9	Spring Rolls	250




## 12. Crispy Grill

- Press the "CRISPY GRILL" Button.
- Press "CRISPY GRILL" Button repeatedly or turn  Dial to select the desired grill mode(Refer to table below ) and stop pressing Button/turning Dial when it displays the preferred setting "C1", "C2" etc.
- Press " START/+30SEC " Button to confirm.
- Turn  Dial to select the cooking weight.
- Press "START/+30SEC" Button to start cooking.

**Note: All the food must be placed on the grill tray, and the grill tray must be placed on the grill rack.**


Crispy grill	Weight(g)	Power	Initial Temp.
C1 Cordon bleu (fresh mini pizza)	200	C-4	Room Temp.
	300		
	400		
	500		
	600		
	700		
C2(lasagna)	800	C-4	Refrigerated Temp.
	200		
	300		
	400		
	500		
	600		
C3(bread)	700	C-4	Freezing Temp.
	800		
	100		
C4(pie/tart)	200	C-4	Refrigerated Temp.
	300		
	400		
	500		
	600		
	700		
	800		

### 13. Low Temp Control


- Press the "LOW TEMP CONTROL" Button.
- Press the " LOW TEMP CONTROL" Button repeatedly or turn " " Dial to select the desired cooking Mode ( Refer to table below). "L1", "L2", "L3" Etc. and the chosen setting will flash. "L1", "L2", " L 3", "L4" or "L5" will flash.
- Press " START/+30SEC " Button to confirm.
- Turn " " Dial to select the cooking temperature.
- Press "START/+30SEC" Button to confirm.
- Turn " " Dial to adjust the cooking time.
- Press "START/+30SEC" Button to start cooking.

Display	40 °C	50 °C	60 °C	70 °C	80 °C	90 °C	100 °C	110 °C	Cooking time (Max)
L1 (Slow cook)						√		√	12h
L2 (Keep warm)			√	√	√				95min
L3 (Food dry/ Dehydrate)	√	√	√	√	√	√			12h
L4 (Yogurt/Raise yeast dough)	√								12h
L5 (Warming box)	√	√	√	√	√	√	√		95min

## 14. Defrost by Weight

- Press " PRO DEFROST " Button once,the oven will display "dEF1".
- Turn  " Dial to select the weight of food.At the same time, "g" will illuminate on display. Key in the weight , range 100-2000 Grams.
- Press "START/+30SEC" Button to start defrosting.


## 15. Defrost by Time

- Press "PRO DEFROST" Button twice, the oven will display "dEF2".
- Turn  " Dial to select the cooking time. The maximum setting time is 95 minutes.
- Press " START/+30SEC " Button to start defrosting.

## 16. Deodorization

Press the " DEODORIZATION " key to start deodorizing .

## 17. Speedy Microwave Cooking

In Standby Mode, turn  " Dial Anti-Clockwise to choose cooking time directly then press "START/+30SEC" Button to cook with 100% microwave power.  
This program can be set as the first stage of multi-stage cook.

## 18. Lock-out Function for Children

Lock: In Stand-By Mode, press "STOP/ CLEAR"Button for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and the lock indicator will illuminate. Screen will display current time or 0:00.  
UNLOCK: In locked state, press " STOP/CLEAR" for 3 seconds, there will be a long "beep" denoting that the lock is released, and the lock indicator will disappear.

## 19. Specification

- The buzzer will sound once when turning the knob at the beginning;
- "START/+30 SEC" Button must be pressed to continue cooking if the door was opened during the cooking process;
- Once the cooking programme has been set , " START/+30 SEC" Button is not pressed in 5 minutes. The current time will be displayed. The setting will be cancelled.
- The buzzer sounds once when press of button is satisfactorily executed. There will no buzzer response if push button action is not satisfactorily executed, so must firmly push to engage.
- The buzzer will sound five times to remind you when cooking is finished.

## 20. Inquiring Function

- During cooking state, press " TIMER/ CLOCK " to check the current time.
- In cooking state, press "POWER/GRILL/ CONVEC/COMBI." the current power will be displayed for 2-3 seconds.

## 21. Mute Function

In Stand-By, press " STOP/CLEAR" Button and hold, then press " START/+30 SEC" Button within 3 seconds, the buzzer will sound once and the oven will enter mute mode. When Buttons are pushed it will not make audible buzzing sound. In Stand-by mode, press " STOP/CLEAR" and hold, then press "START/+30 SEC" Button within 3 seconds, the buzzer will sound once and the oven will exit mute mode.

## 22. ECO Function

Enter ECO mode: In Stand-By Mode, press "STOP/ CLEAR" Button briefly, the screen will turn off. Exit ECO mode: Press any key.

## Care and Cleaning

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

## Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

## Precautions to Avoid Possible Exposure to Excessive Microwave Energy

- Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

- WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## Addendum

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## Specifications

Model:	SNAMW30
Rated Voltage:	230-240V~50Hz
Rated Input Power(Microwave):	1450W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1100W
Rated Input Power(Convection):	2300W
Oven Capacity:	30L
Turntable Diameter:	Ø 315mm
External Dimensions:	520x500x326mm
Net Weight:	Approx.18.9kg

# Trouble Shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started	1. Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	2. Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker(repaired by professional personnel of our company)
	3. Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat	4. Door not closed well.	Close door well.

**NOTE: As a result of continual improvements,the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.**

# One Year Warranty Statement

smith + nobel appliances are guaranteed from the date of purchase for 1 year against manufacturing defects and abnormal deterioration when used in accordance with the care and use instructions for normal domestic use. The warranty excludes damage resulting from product misuse or product neglect. Please return at your expense, to a Harris Scarfe store for assessment by a team member. Once approved, a like replacement or refund, may be offered. Please keep your receipt as proof of purchase for this product warranty. The benefits given by this warranty are in addition to other rights and remedies you may have under Australian Consumer law.

This warranty is provided in addition to other rights and remedies you may have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Harris Scarfe Australia Pty Ltd, ABN 83 095 018 803  
Level 4, 111 Cecil Street, South Melbourne VIC, Australia 3205  
Ph:03 9863 2200  
customerservice@harrisscarfe.com.au

